

BIG BOX COVER

INSTALLATION INSTRUCTIONS

1. DISCONTINUE CURRENT TO OUTLET AT MAIN ELECTRICAL OUTLET.
2. REMOVE EXISTING WALL PLATE COVER WITH EITHER CENTER SCREW OR TOP AND BOTTOM SCREWS.
3. REPLACE WITH BIG BOX WALL PLATE USING ENCLOSED SCREWS. BE SURE TAB LOCK HOLE IS AT THE TOP. ARROW ON PLATE POINT IN AN UP DIRECTION.
4. PLUG IN APPLIANCE, ALIGNING CORD TO BOTTOM OF PLATE.
5. GRASP COVER WITH 2 HANDS, SLIP LEFT SIDE TABS INTO LEFT SIDE SLOTS, COMPRESS RIGHT SIDE AND PRESS TABS INTO RIGHT SIDE SLOTS, THEN COMPRESS TOP TO SECURE TOP TAB IN TOP SLOT.
6. PUSH ON BOX TO MAKE SURE TABS HAVE SEATED CORRECTLY.
7. TO REMOVE, REPEAT OPERATION IN REVERSE.

WARNING: Children should never be left unattended. The Big Box cover has been designed to inhibit access to the electrical socket itself as well as plug connectors. Its value as a barrier depends on your child's stage of physical development. The Big Box cannot guarantee your child's safety. Parental supervision is essential.

Fire Retardant Material

Made in USA