



# DELUXE TOP DOOR LOCK #2006

## Tools Needed


Pencil, screwdriver and drill.

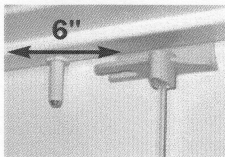

1

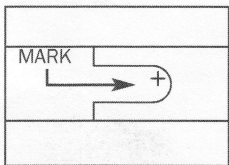

2

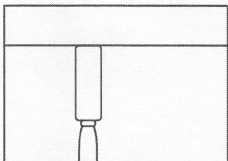

3

## To Install

1. Place the Door Lock on top of the door and position it with the U-shaped slot approximately 6" from the edge of the door. Note: Door Lock is shown with optional wand.

2. Close the door and mark the door frame at the center of the U-shaped slot. If Door Lock hinders the door from closing, place a block of wood against the underside of the door frame and tap upward.

3. Drill a hole for the peg with a 1/8" drill bit.

4. Insert the screw into the peg. Mount the peg to the underside of the door frame at the mark. Close the door and move the Door Lock so the U-shaped slot slides easily onto the peg.

Note: This product is designed to help minimize accidents. Use of this product is not a substitute for adult supervision.

**Safety Innovations™**

BillERICA, MA 01821 800-598-8911