



**Sliding Window / Door Lock (No-Mar)**  
**U-9820 (Alum.) U-9821 (White)**

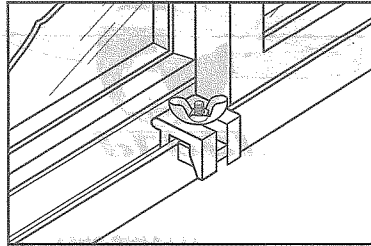

**Bottom Track**

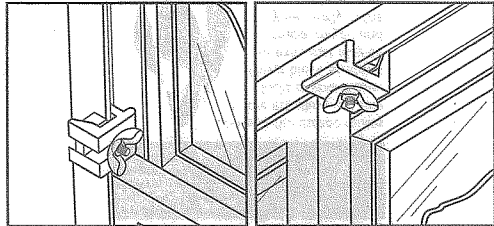

**Side Track**

**Top Track**

**TO INSTALL:** Close movable panel. Attach lock to track edge behind movable panel. Application may be on vertical or horizontal track. Turn wing nut clockwise and tighten with pliers. For venting position, locate lock approximately 2" back of closed panel and tighten screws.

**PARA INSTALAR:** Cierre el panel deslizando. Fije el mecanismo sobre el borde del riel, de trás del panel deslizando. La instalación puede ser realizada sobre el riel vertical o el horizontal. Gire la tuerca "mariposa" en el sentido del reloj y apriete con tenazas. Para proceder a una instalación en una apertura entreabierta, instale el mecanismo aproximadamente a 5 cm de la parte trasera del panel cerrado y apriete la tuerca "mariposa".

**POUR INSTALLER:** Fermez le panneau coulissant. Fixez le mécanisme au rebord du rail, derrière le panneau coulissant. L'installation peut s'effectuer sur le rail vertical ou horizontal. Tournez l'écrou à ailettes dans le sens horaire et resserrez-le à l'aide de pinces. Pour procéder à une installation d'une ouverture entrebâillée, installez le mécanisme à environ 5 cm, à l'arrière du panneau fermé et resserrez l'écrou à ailettes.